


Assembly instruction: Bordeaux




Assembly instruction: Bordeaux

Description of components

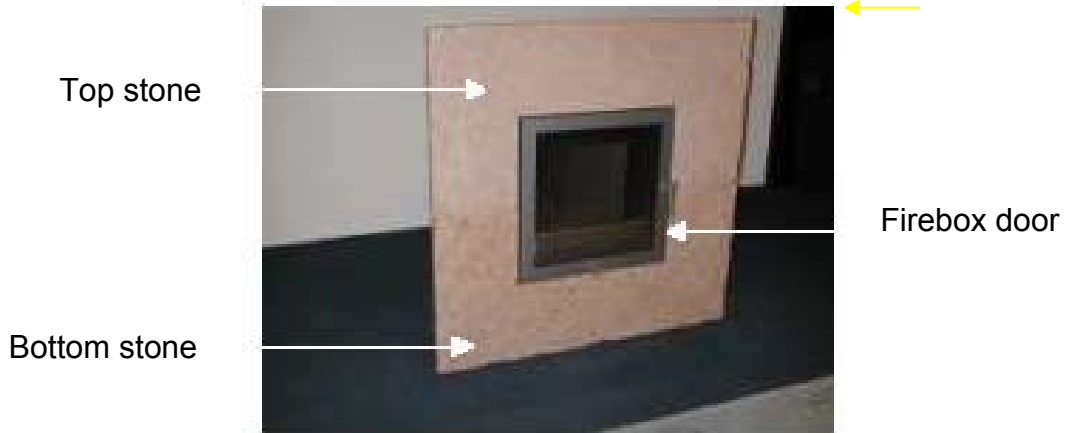

Top Bracket

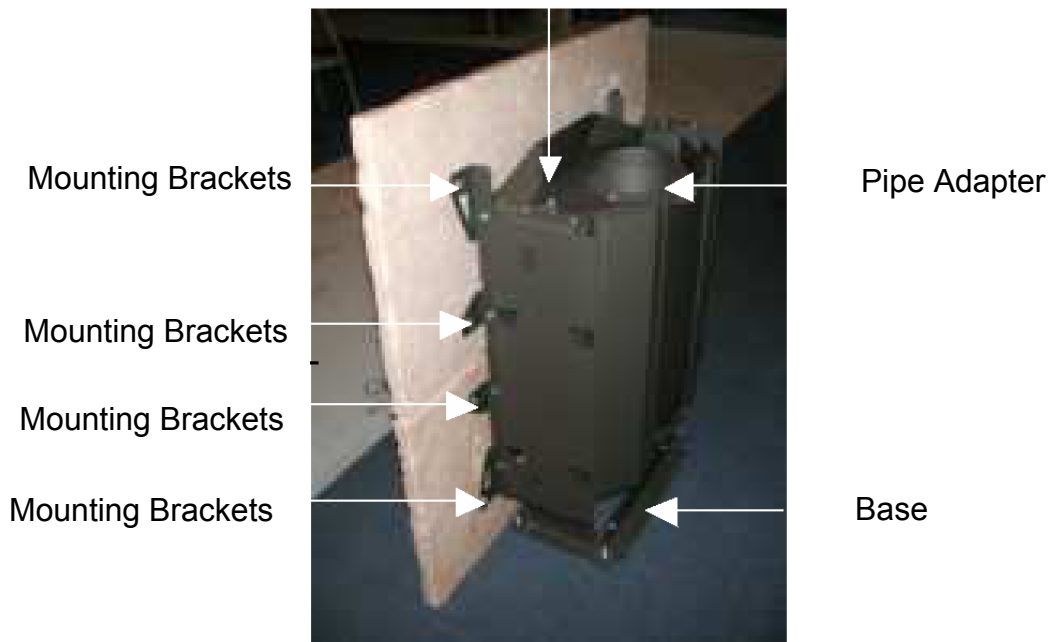

Assembly instruction: Bordeaux

Tools for stove assembly:

1. Flat head screw driver
2. Phillips screw driver
3. Water-level
4. Padded 2-wheel hand cart
5. Allen key, #5
6. Ratchet with 13mm socket and extension
7. Adjustable wrench
8. Cotton gloves



Attention:

During the assembly process, wear cotton gloves.



Attention:

All parts of steel and glass. Ceramics especially natural stone are to be handled with special care! **Do not** push against other parts or bodies and **do not** put down on corners and edges. **Lay a carton under** product when servicing!



Attention:

The water wall has a highly polished metal surface. Avoid touching to prevent damage.

Caution:

Clean the floor before placing the glass plate!

1. Place stove onto base bracket. Align so the stove balances on the for locating feet. Height of lower edge of the door to floor is approximately 12 inches.



2. For optimal stability, bolt stove to the floor using mounting holes.
3. Put the stove mounting bracket on the glass plate.
4. Locate screw holes for the stone.



4. Loosen thumb screws.
Loosen at the chimney oven on the right of and of the stone owners lower on the left of in each case the 2 thumbscrews.




5. Place the lower stone in place.



Warning – Do not leave stone unattended. Tipping danger.



6. Firmly tighten the thumb screws to the stone.

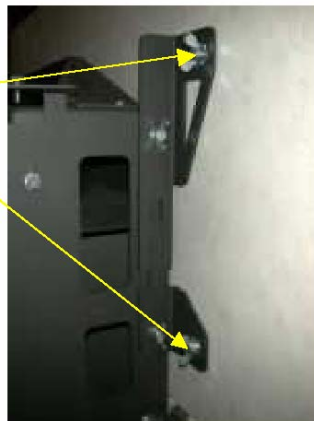


Assembly: Bordeaux Page 3 of 4

If product ordered does not have steel border skip this page and go directly to page 4.



With steel Border



7. Install the steel border on the stone surface, making sure they are not visible from the show side.

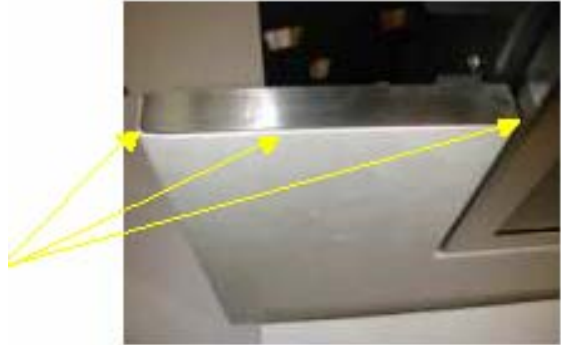


8. Screw the steel borders onto the support angles strongly.

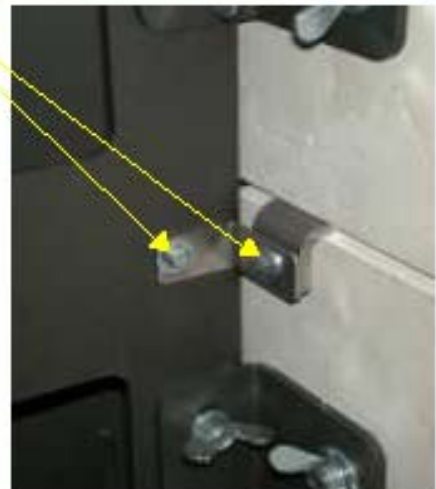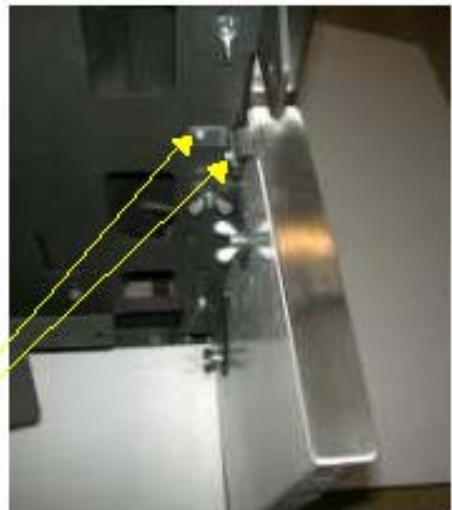

9. Install the upper stone using the same process used to install the lower stone.
10. Loosen the hold screws on both sides of the firebox.
11. CAREFULLY set the upper stone onto the lower stone.
12. Firmly screw the 4 thumbscrews. Do not use a key to tighten as the stone may break.



Attention, Hand tighten only.
Do not use tool as the stone needs to expand and contract.

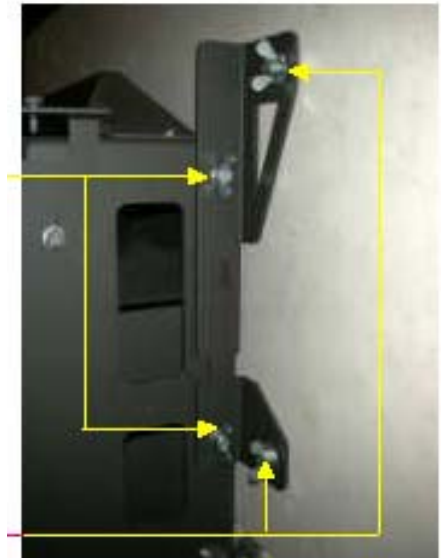

13. Ensure the gap between the firebox, and the lower stone are even.
14. You can adjust the height of the stone using the placement screws on the stove.

